



PuckPack Instalation (DEK)

- Please Follow these Instructions To install your New PuckPack To The DEK 265 Printer Range.

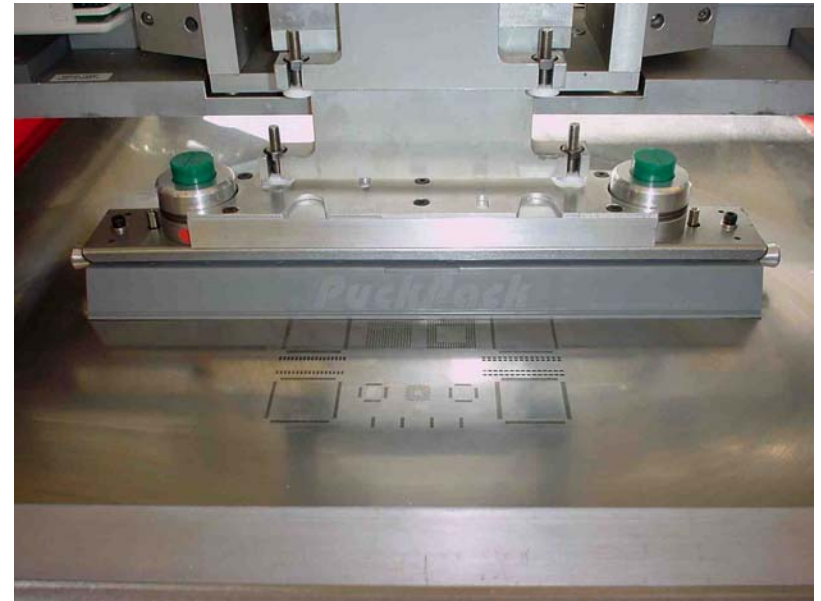

Attach Incremental cap drive pads.

- Cycle Squeegee stroke to the rear position.
- Remove squeegee & clean stencil.
- Fit the Inc cap drive pads.

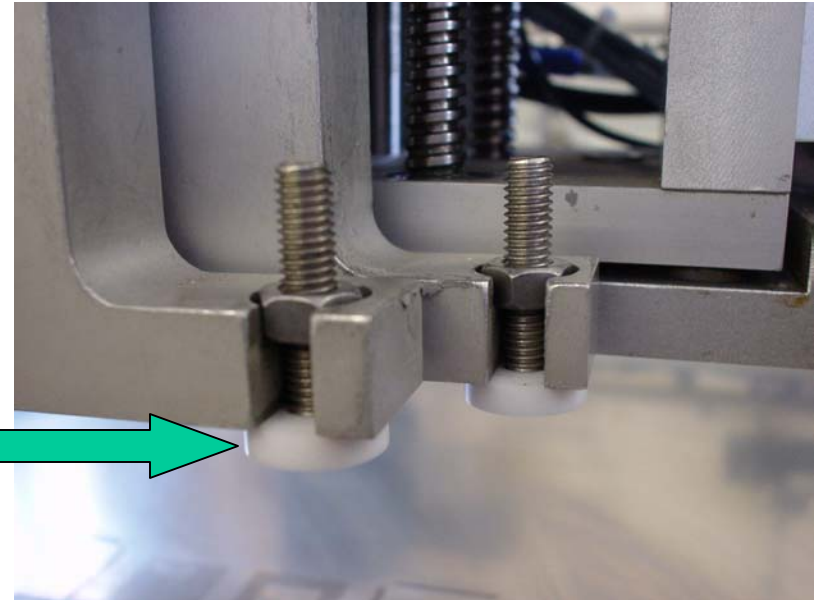


Software set up.

- Increase the Print Pressure to 15KG
- Ensure snap of is set to zero
- Set the front print limit to 15mm
- In maintenance mode. Go to set preferences, then set the rail width to *Extended* and the paste trails to *disabled*.
- If this software option is not available use the Dek Top with the Square cut out !




Attach the Incremental Cap

- Firstly place the chamber retaining plate around the Puckpack.
- Push down and turn to ensure the ball locks are in the off position and put the cap on the PuckPack.
- Attach the incremental cap to the PuckPack using the spring clips.

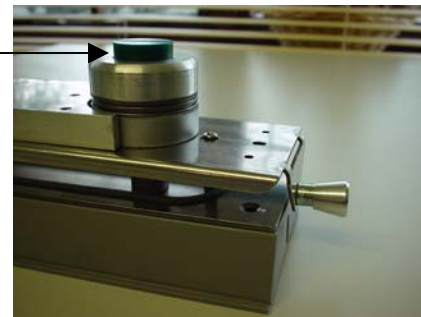

Locate the PuckPack

- Set the printer to auto print mode and run print with no board on the conveyer.
- Lift up the machine front
- Locate the top of the Incremental cap under the Drive pads as shown.
- Release the Ball lock mechanisms on the Incremental Cap.
- Print.

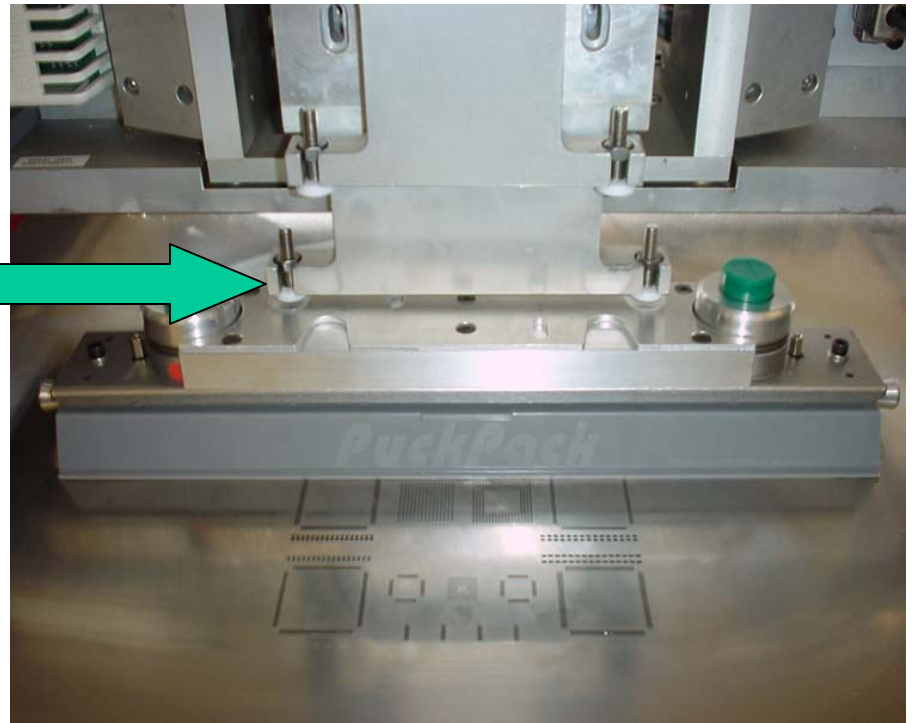

Trouble shooting !

The print machine will need two or three passes in each direction to achieve the new print pressure required.

If after these passes the correct pressure is not achieved a new squeegee calibration may be required for the print head size. (call PastePuck for assistance if required)